

M2-M - Firmware Update

1 Cable / COM Connection (Simple Null-Modem)

A simple Null-Modem Cable is needed to update the monitors firmware.

Only Rx, Tx and Ground have to be connected. It is important that no other pins are connected



2 Download M2-M-Config

Download latest version of the Tool M2-M-Config from the following website:

http://sonove.com/maritime-products/m2-series/software/

2.1 Setup M2-M-Config

Just extract the ZIP – File into a folder on you PC.

By default it will be extracted into \M2-M-Config-(x.x.x.x)

Simply delete the folder to uninstall the tool.

3 Perform the Firmware Update

Connect the Serial Cable to the monitors COM Port.



Start the Application:

 $\M2-M-Config-(x.x.x.x) \bin\M2-M-Config.exe$



Following screen should appear:

SONOVE

M2 Monitor Update: 2.11.39.0		
Prepare the Update Process		6
Please verify following preconditions, bef	ore we can update the firmware	
 Connect your PC and Monitor with a Null Modem Cable (without hardware handshake, just RX/TX crossover and GND connected) 		SONOVE
2) Ensure that no other cable is connected to the second COM Port of the Monitor		
 During the Update, a hard reset is nee In that case, the Monitor has to be dis Please make sure that the monitor car 	eded. connected from the power supply. n be disconnected and reconnected easily	
 Ensure that COM Port of the M2 Monit You will find the setting in the OSD Me 	or is set to RS232. enu [Setup->Advanced->COM Port Settings]	
COM Port: COM3 ~	Begin Update	Close
Update Controller Board Firmware	0.0%	
Read all Versions	0.0%	
Detect Monitor Firmware	0.0%	
Read Configuration	0.0%	
Update Monitor Firmware	0.0%	
Write Configuration	0.0%	
Calibrate Monitor	0.0%	
Verify update	0.0%	

Please select the COM Port from your PC, you connected the monitor to and press [Begin Update] to start the Update Process.

This will take a few minutes.

Attention: Do not "Power Off" the monitor unless you will be asked by the application.

Follow the instructions on the screen.